

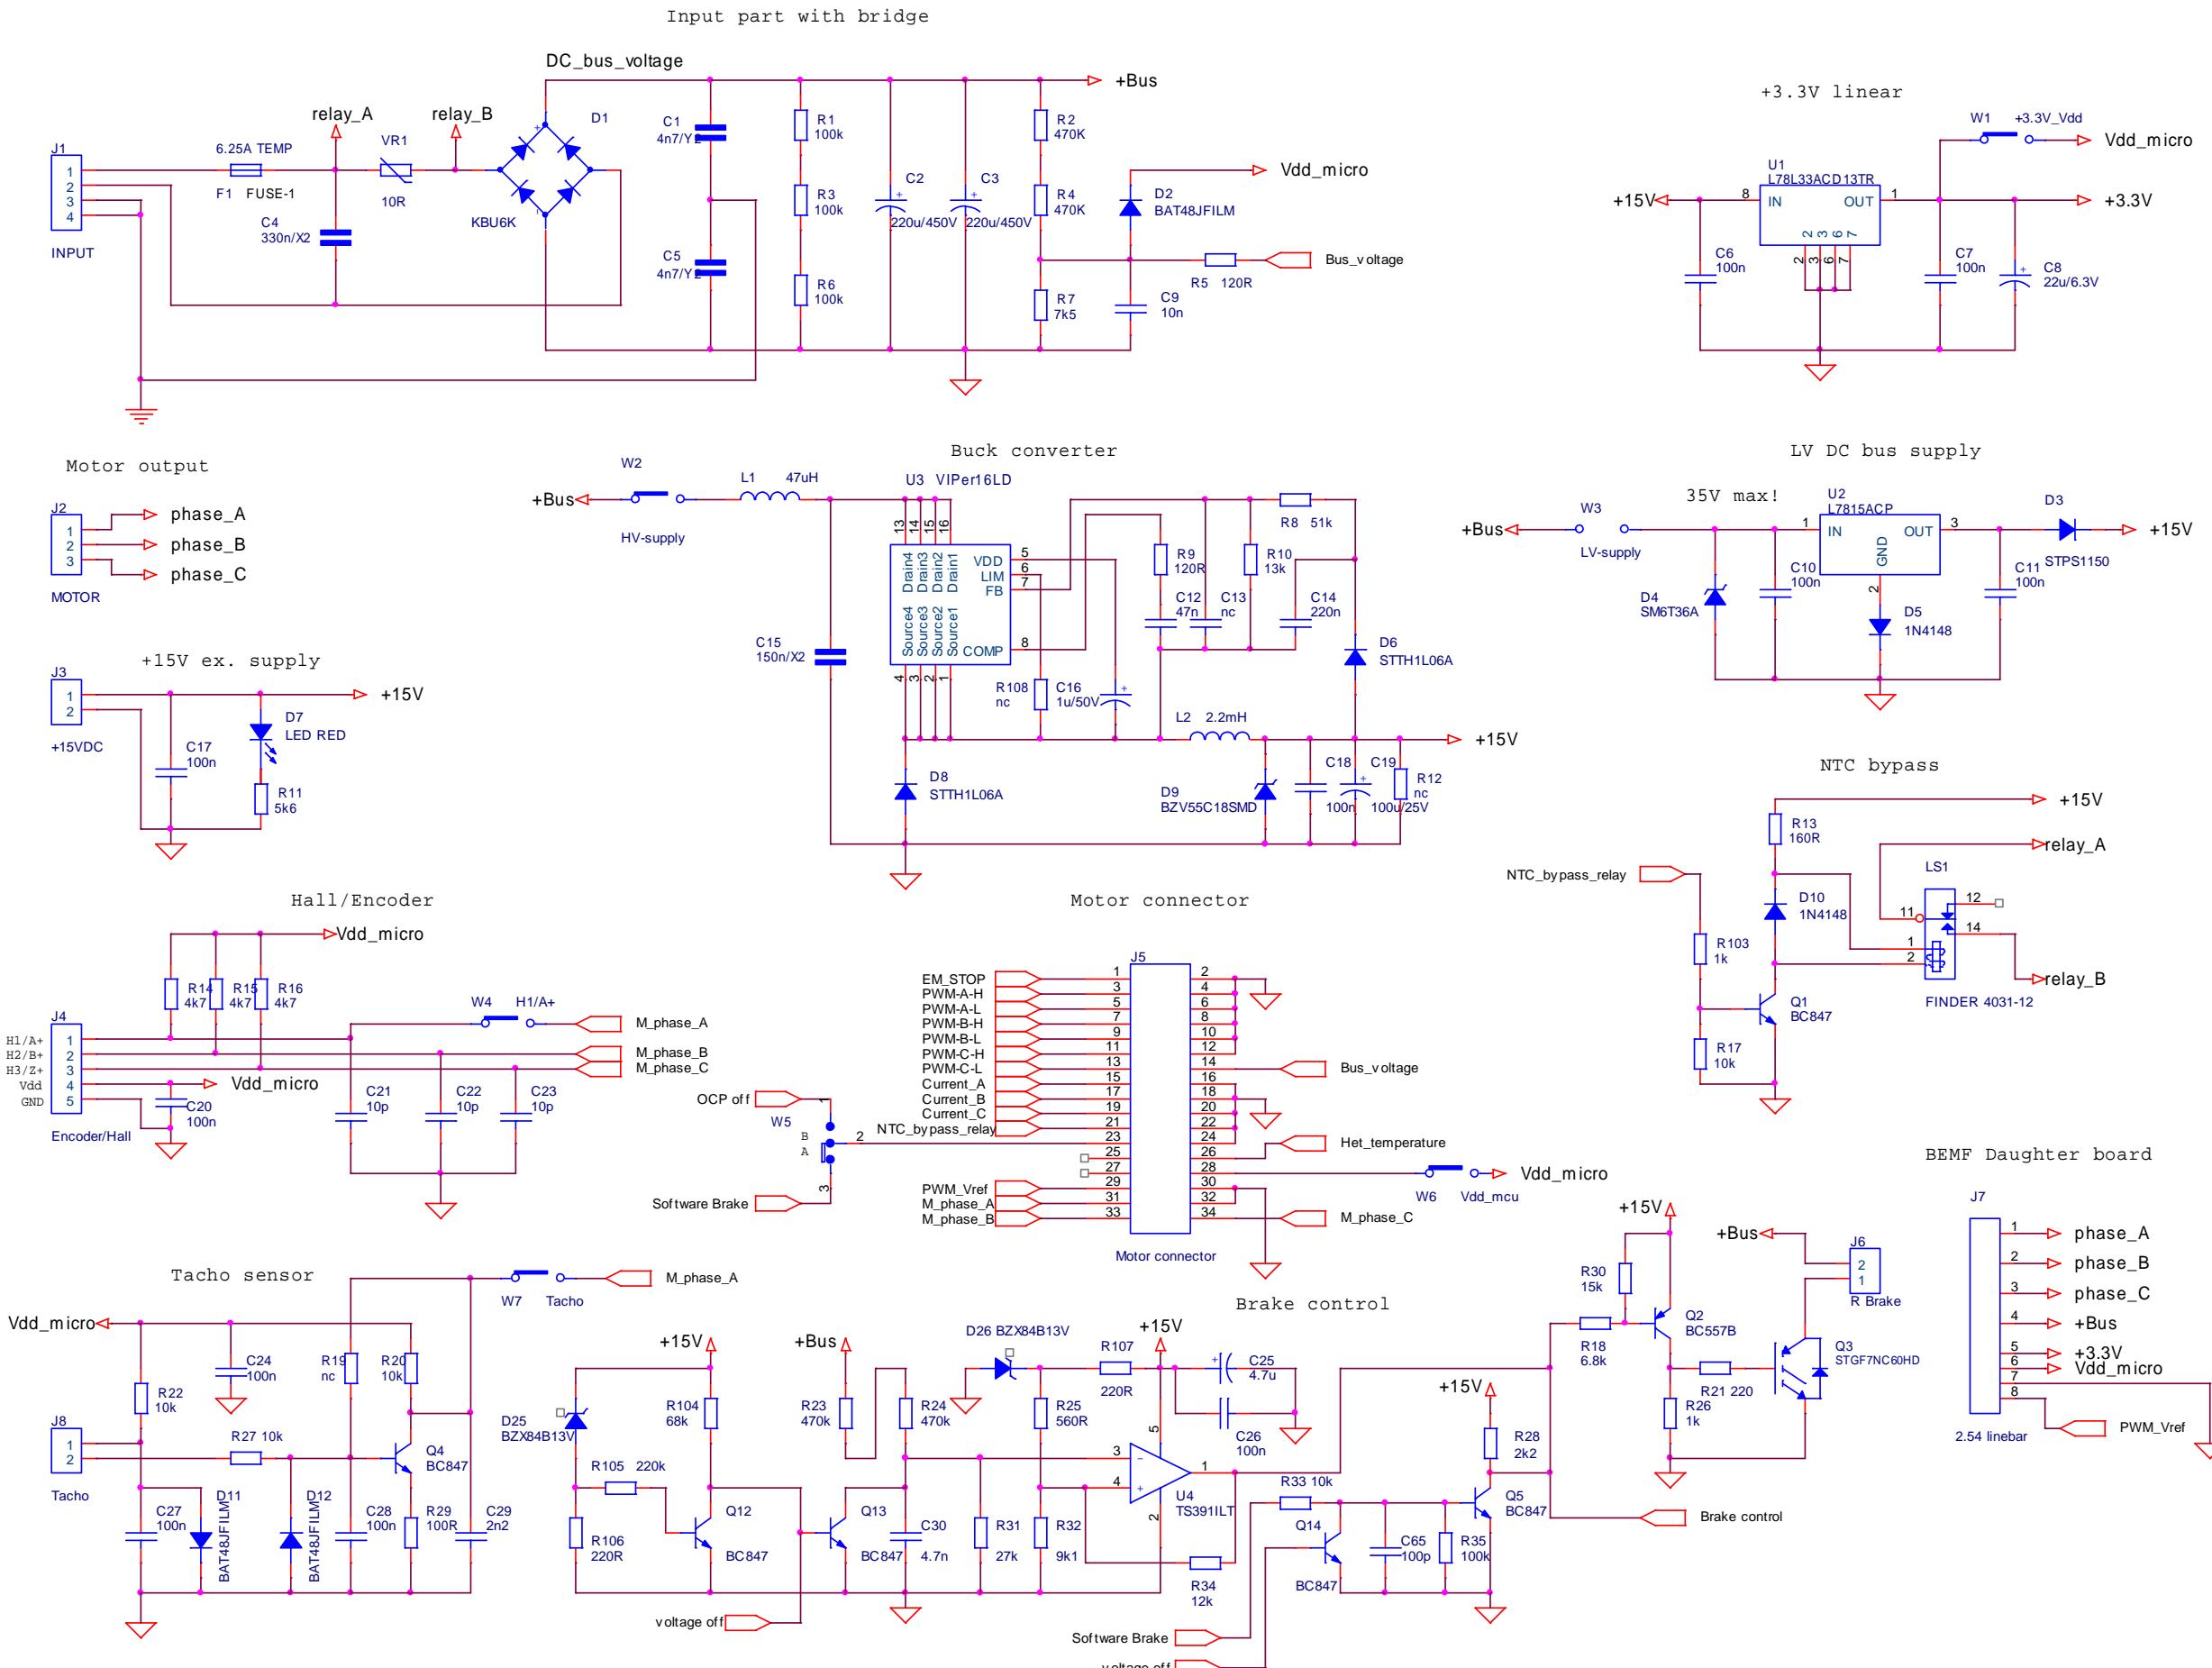


# STEVAL-IHM023V1

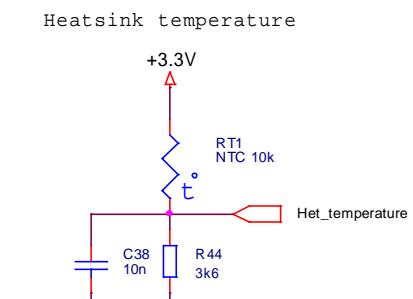

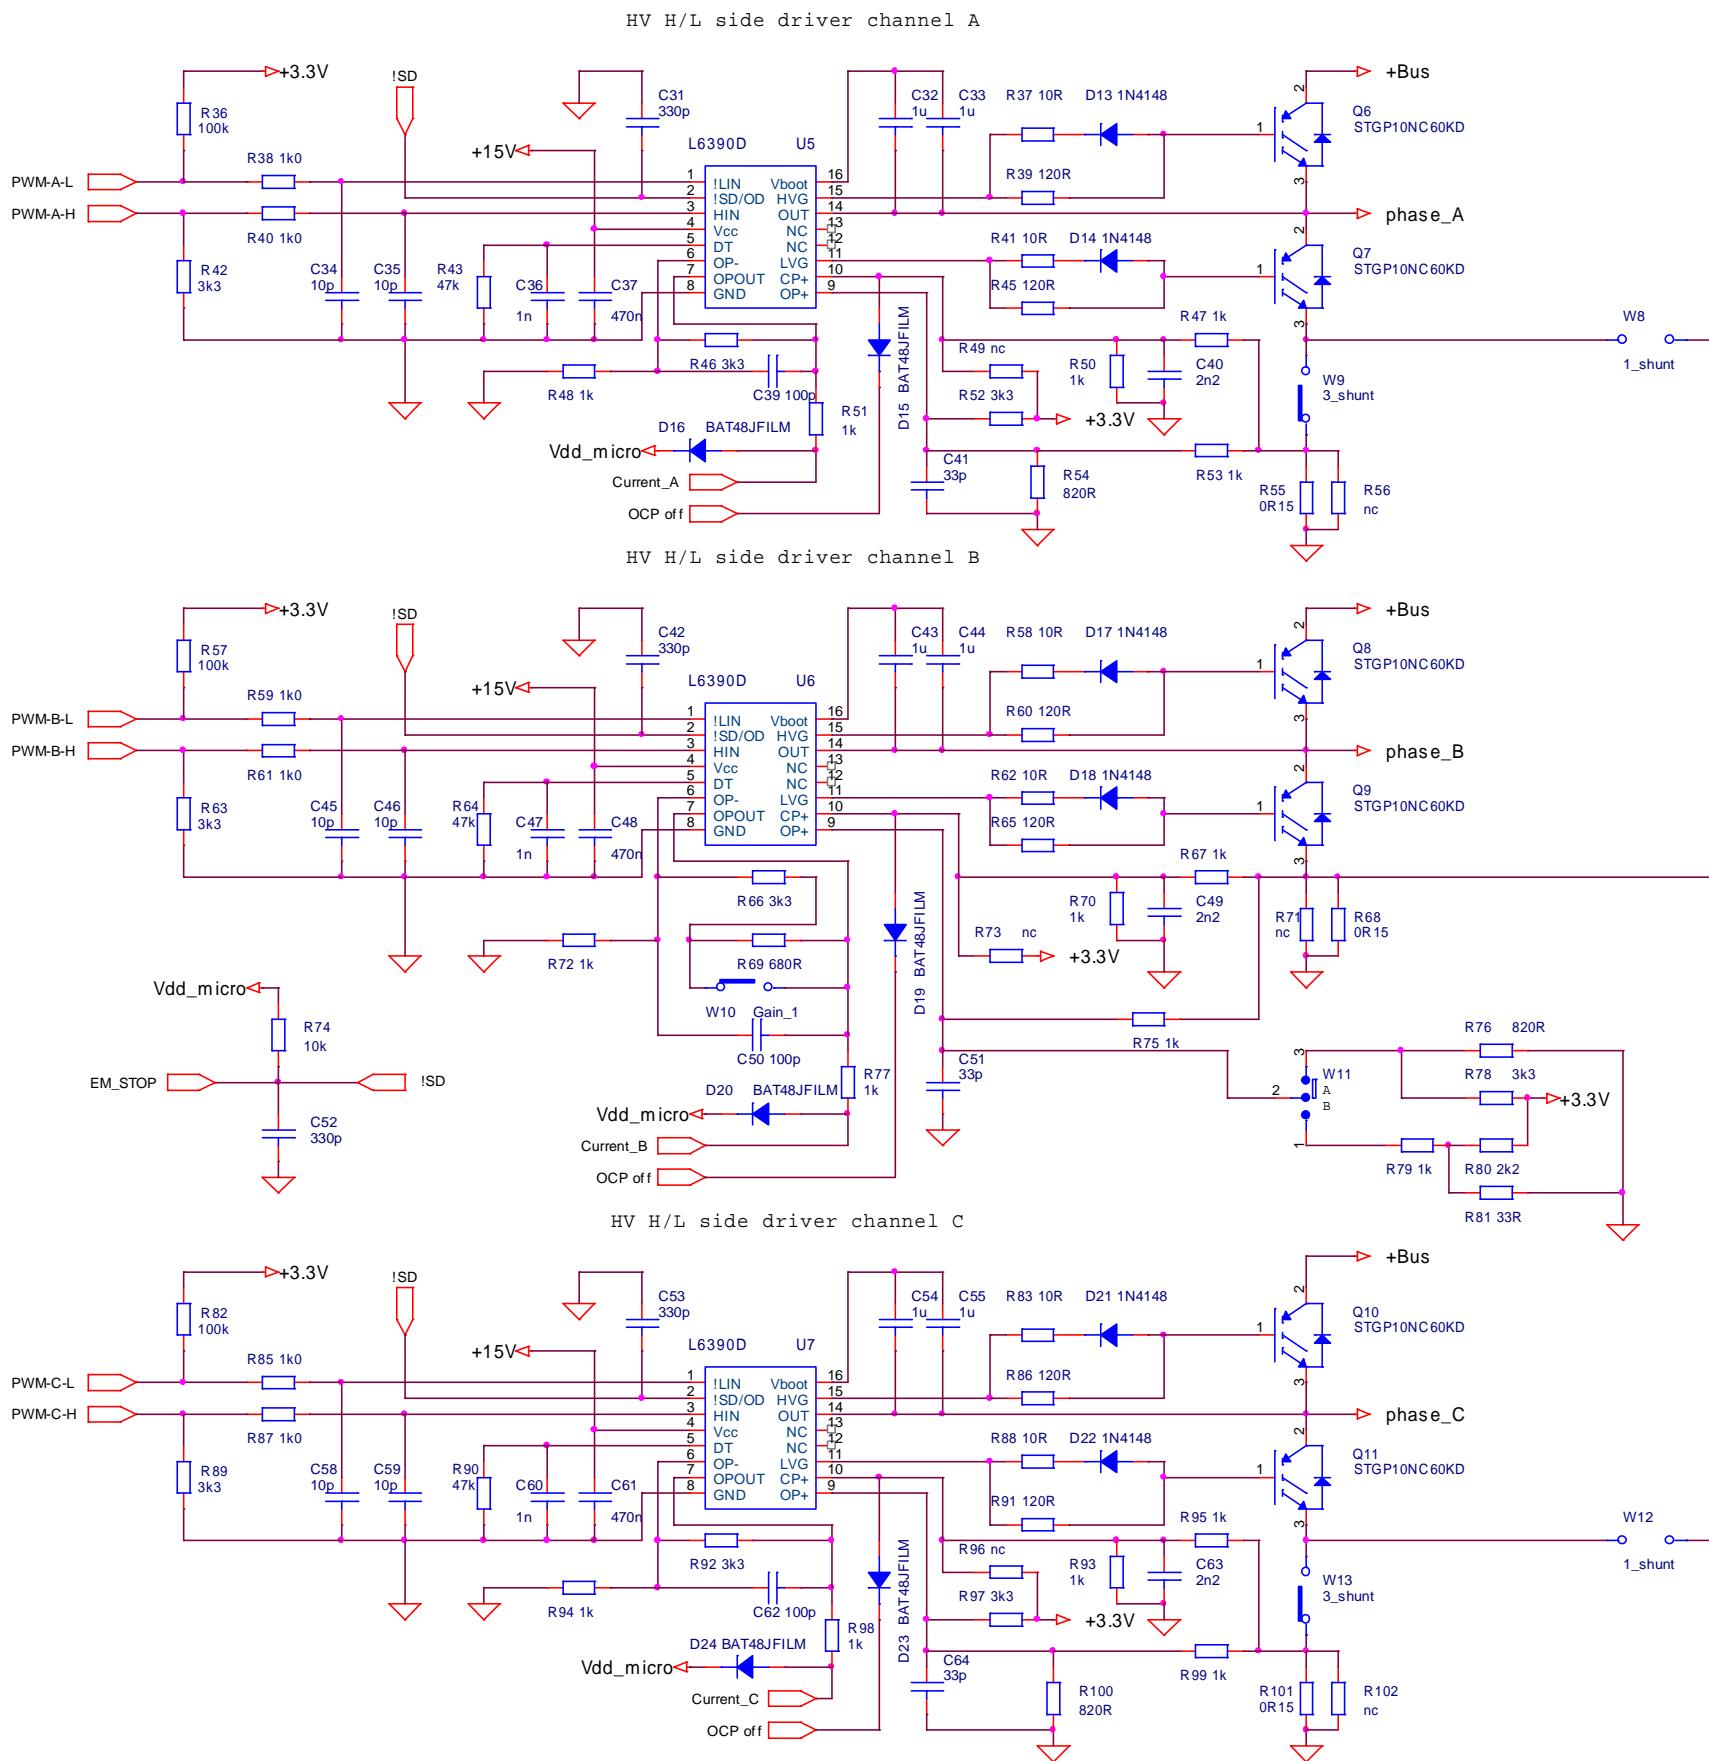

**Test pins**

TP1	phase_A
TP2	phase_B
TP3	phase_C
TP4	PWM-A-L
TP5	PWM-A-H
TP6	PWM-B-L
TP7	PWM-B-H
TP8	PWM-C-L
TP9	PWM-C-H
TP10	Current_A
TP11	Current_B
TP12	Current_C
TP13	M_phase_A
TP14	M_phase_B
TP15	M_phase_C
TP16	Bus_voltage
TP17	Brake control
TP18	+3.3V
TP19	+15V
TP20	ref
TP21	

**Het NTC comparator**

