

低于 1 GHz 的 6LoWPAN 网络处理器

特性

- 在任一设计中简单集成支持网状无线网络的 **6LoWPAN**
- 运行 **Sensinode**公司成熟稳定的 **6LoWPAN** 通信协议栈, **NanoStack 2.0 Lite**
- 与大多数运行此应用程序的微控制器的 **UART** 接口
- 支持使用**Sensinode NanoBoot API**的 **NanoStack 2.0 Lite 6LoWPAN** 通信协议栈的更新。如果主机微控制器有足够的内存来存储新的协议栈镜像文件的话, 支持无线更新。
- **6LoWPAN** 网状系统概述举例
- 无线电特性:
 - **315/433/868/915 MHz ISM/SRD** 波段
 - 输出功率: **-30 dBm** 至 **+10 dBm**
 - 数据传输率: **50, 100, 150** 和 **200 kbit/s**
 - **AES-CCM** 安全 **802.15.4e** 净荷, 使用跨网络关键字
- 绝佳的接收器灵敏度和同类产品最佳的抗干扰性
- 借助卓越的性能支持 **FCC** 窄带要求
- 电源
 - 宽电源电压范围 (**2 V – 3.6 V**)
 - 低电流消耗
- 外部系统
 - 很少的外部组件
- 符合 **RoHS** 的 **6 x 6 mm QFN 36** 封装

应用

- 需要 **IP** 骨干网互联互通的大规模网络
- 自动抄表
- 接到照明系统
- 家庭和楼宇自动化
- 工业监控和控制
- 网状感应器网络

说明

CC1180 是一款划算的, 低功耗, 低于 1GHz的 6LoWPAN 网络处理器, 此处理器用最少的开发成本实现 6LoWPAN 的功能性。

CC1180 是 CC1110F2的预装版本, 在这些器件上, TI 的第三方合作伙伴 Sensinode公司的 6LoWPAN 通信协议栈, NanoStack 2.0 Lite运行在 CC1180 网络处理器上。此应用控制运行在外部主机微处理器上的网络处理器。CC1180 处理所有时序关键型和处理密集型 6LoWPAN 协议栈, 并且使应用微处理器可留出资源处理此应用。

由于在微处理器的选择方面提供了很大的灵活性, CC1180 使同时向全新的或者现有的产品添加 6LoWPAN 功能性变得十分容易。在用户指南SWRU298中描述了如何使用 Sensinode NanoStack 2.0 协议栈。

CC1180 通过UART接口与几乎所有的微处理器进行连接。例如, CC1180 能与 MSP430联合使用。

CC1180 包含一个引导加载程序, 即Sensinode NanoBoot。此引导加载程序用于下载 Sensinode 6LoWPAN 通信协议栈, 即NanoStack 2.0 Lite。

CC1180 支持Sensinode公司的 NAP 协议 API。由于NAP 协议 API 只需学习极少量的 API 调用命令, 从而大大简化了 6LoWPAN 应用的开发。API 有一个类似于的插槽 以实现主机和网络处理器之间简单快速的整合。

CC1180 出厂时预装 Sensinode NanoBoot 和一个 TI IEEE EUID (MAC 地址); 可使用N按钮boot对 MAC 地址进行读写。



Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this data sheet.

Table of Contents

APPLICATIONS	1
PRODUCT DESCRIPTION	1
KEY FEATURES	1
TABLE OF CONTENTS	2
ABBREVIATIONS	3
1 ELECTRICAL CHARACTERISTICS	4
2 PIN AND I/O PORT CONFIGURATION	4
3 APPLICATION CIRCUIT	6
4 SENSINODE NANOBOOT API	7
4.1 INTRODUCTION	7
4.2 OVERVIEW	7
4.3 NANOBOOT PROTOCOL	7
4.4 API COMMANDS	8
4.5 STATE MACHINE	9
4.6 SOFTWARE UPDATE PROCESS	10
5 DEBUG INTERFACE	12
6 DEVELOPMENT KIT ORDERING INFORMATION	13
7 REFERENCES	13
8 GENERAL INFORMATION	13
8.1 DOCUMENT HISTORY	13

Abbreviations

AES	Advanced Encryption Standard	LQI	Link Quality Indicator
API	Application Programming Interface	LSB	Least Significant Byte
ARIB	Association of Radio Industries and Businesses	MAC	Medium Access Control
BOM	Bill of Materials	MSB	Most Significant Byte
CFR	Code of Federal Regulations	NA	Not Available
CPU	Central Processing Unit	NC	Not Connected
CRC	Cyclic Redundancy Check	PA	Power Amplifier
DC	Direct Current	PCB	Printed Circuit Board
EM	Evaluation Module	PER	Packet Error Rate
ESD	Electro Static Discharge	PHY	Physical Layer
ETSI	European Telecommunications Standards Institute	RAM	Random Access Memory
FCC	Federal Communications Commission	RF	Radio Frequency
FCS	Frame Check Sequence	RoHS	Restriction on Hazardous Substances
I/O	Input / Output	RSSI	Received Signal Strength Indicator
IEEE	Institute of Electrical and Electronics Engineers	RX	Receive
ISM	Industrial, Scientific and Medical	TBD	To Be Decided / To Be Defined
JEDEC	Joint Electron Device Engineering Council	TI	Texas Instruments
kB	1024 bytes	TX	Transmit
kbps	kilobits per second	UART	Universal Asynchronous Receiver/Transmitter
		USART	Universal Synchronous/Asynchronous Receiver/Transmitter

1 Electrical Characteristics

For Electrical Characteristics tables, see SWRS033.pdf.

2 Pin and I/O Port Configuration

The **CC1180** has the exact same pinout as **CC1110F32** and is shown in Figure 1 and Table 1.

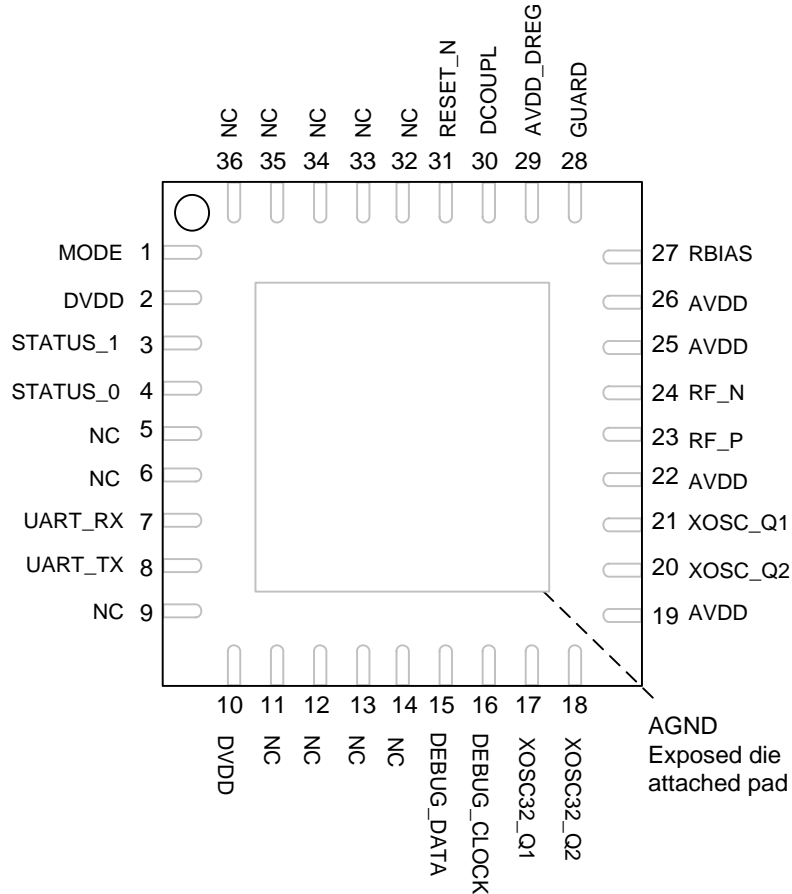


Figure 1: Pinout top view

Note: The exposed die attach pad **must** be connected to a solid ground plane as this is the ground connection for the chip.

Pin	Pin name	Pin type	Description
-	GND	Ground	The exposed die attach pad must be connected to a solid ground plane
1	MODE	Digital Input	CC1180 Input, connection with host MCU to control application or bootloader mode [2]. Must be high by default. Falling edge toggles mode.
2	DVDD	Power (Digital)	2.0V-3.6V digital power supply for digital I/O
3	STATUS_1	Digital Output	CC1180 Output, can be connected to e.g. LED to indicate application / bootloader mode [2].
4	STATUS_0	Digital Output	CC1180 Output, can be connected to e.g. LED to indicate application / bootloader mode [2].
5	NC	D I/O	NC
6	NC	D I/O	NC
7	UART_RX	Digital Input	CC1180 USART0 RX Input, connection to host MCU [2].
8	UART_TX	Digital Output	CC1180 USART0 TX Output, connection to host MCU [2].
9	NC	D I/O	NC
10	DVDD	Power (Digital)	2.0V-3.6V digital power supply for digital I/O
11	NC	D I/O	NC
12	NC	D I/O	NC
13	NC	D I/O	NC
14	NC	D I/O	NC
15	DEBUG_DATA	D I/O	Debug Data
16	DEBUG_CLOCK	D I/O	Debug Clock
17	XOSC32_Q1	D I/O	32.768 kHz crystal oscillator pin 1
18	XOSC32_Q2	D I/O	32.768 kHz crystal oscillator pin 2
19	AVDD	Power (Analog)	2.0V-3.6V analog power supply connection
20	XOSC_Q2	Analog I/O	26 MHz crystal oscillator pin 2
21	XOSC_Q1	Analog I/O	26 MHz crystal oscillator pin 1, or external clock input
22	AVDD	Power (Analog)	2.0V-3.6V analog power supply connection
23	RF_P	RF I/O	Positive RF input signal to LNA in receive mode Positive RF output signal from PA in transmit mode
24	RF_N	RF I/O	Negative RF input signal to LNA in receive mode Negative RF output signal from PA in transmit mode
25	AVDD	Power (Analog)	2.0V-3.6V analog power supply connection
26	AVDD	Power (Analog)	2.0V-3.6V analog power supply connection
27	RBIAS	Analog I/O	External precision bias resistor for reference current
28	GUARD	Power (Digital)	Power supply connection for digital noise isolation
29	AVDD_DREG	Power (Digital)	2.0V-3.6V digital power supply for digital core voltage regulator
30	DCOUP	Power decoupling	1.8V digital power supply decoupling
31	RESET_N	DI	Reset, active low
32	NC	D I/O	NC
33	NC	D I/O	NC
34	NC	D I/O	NC
35	NC	D I/O	NC
36	NC	D I/O	NC

Table 1: Pinout overview

3 Application Circuit

Since **CC1180** is a preloaded version of **CC110F32**, the application circuit for **CC1180** can be found in [1].

Figure 2 shows the software architecture for an application circuit where the **CC1180** network processor is controlled from a host MCU.

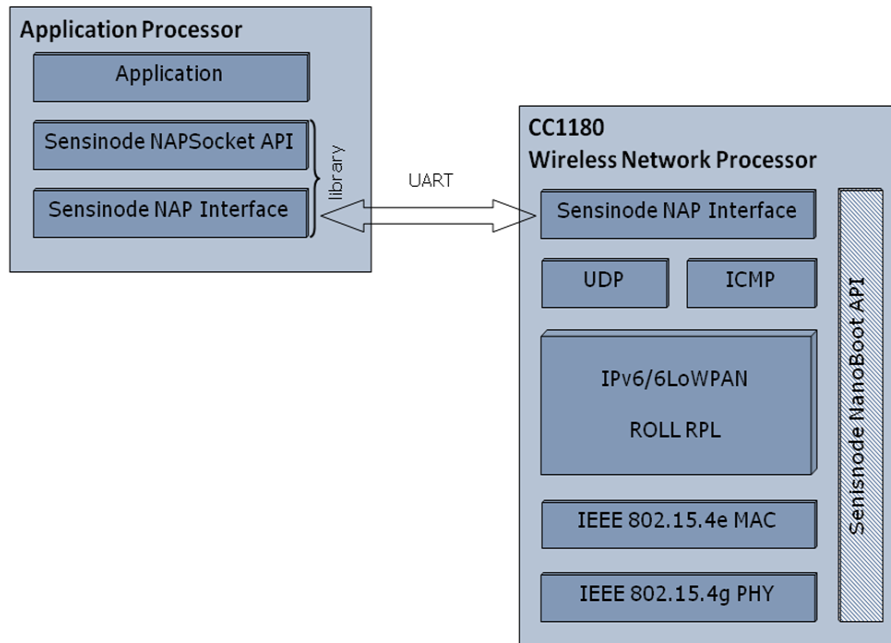


Figure 2. CC1180 based 6LoWPAN System

4 Sensinode NanoBoot API

4.1 Introduction

This section contains protocol description of Sensinode NanoBoot – the NanoStack 2.0 Lite bootloader. NanoBoot is a separate software component that can be used to update the 6LoWPAN stack firmware installed in flash. The Sensinode NanoStack 2.0 Lite stack firmware is encrypted; it is not possible to download stack firmware not verified by Sensinode. The use of bootloader requires the device that uploads the new flash image (i.e. the host) to implement the host part of the bootloader protocol.

4.2 Overview

NanoBoot is installed into flash address 0x0000. When the **CC1180** device is powered up, the bootloader is initialized. Depending on the contents of the flash memory at address 0x6FF7 the software will remain in bootloader mode or the Sensinode NanoStack 2.0 Lite 6LoWPAN stack will be executed. The Bootloader will remain active if the byte value is 0xFF, while value 0x00 will cause the 6LoWPAN stack to start executing.

The Bootloader requires a total of 5kB of flash memory. **CC1180** has 32kB of flash in total, thus 27kB of flash memory is available for the NanoStack 2.0 Lite 6LoWPAN stack. Available RAM is not affected.

The MAC address of **CC1180** is stored at flash address 0x6FF8 and is 8 bytes long.

4.2.1 Changing Application Mode

Before the application MCU can communicate with the NanoBoot module on the **CC1180** the module must be enabled properly. This is done by pulling **CC1180**MODE signal down to ground (0 volts); this causes a falling edge interrupt to occur. The NanoBoot mode is toggled on each falling edge of the MODE signal. The currently active mode can be identified from the state of the STATUS_0 (pin 4) and STATUS_1 (pin 3) pins. When STATUS_0 and STATUS_1 are constantly high, the **CC1180** device is in bootloader mode. See [2] for details.

4.3 NanoBoot Protocol

The Sensinode NanoBoot protocol has been designed to be an easy-to-parse, low-overhead serial protocol that has enough flexibility and extensibility for the NanoBoot bootloader. Low complexity has been an important design goal so that the protocol can be efficiently parsed even on MCUs with very limited resources. The potentially limited serial port data rates have imposed the need for a very low overhead compared to the actual payload data. Each packet of bootloader protocol is a NAP configuration packet with a special control byte (CT). This allows the application MCU to use the same NAP protocol implementation for all communication with the **CC1180** device. See [2] for more details on the Sensinode NAP Protocol.

The high level packet format is described in Table 2.

Byte	1	2	3	4	5	...	N
Name	Length	'N'	'A'	CT	cmd_id	[Variable]	CS

Table 2. High level NAP packet format

4.3.1 Length Byte

The first byte of a packet is **always** the total length of the packet **not including** the length byte itself but **including** the last byte (**CS**). The byte is in normal host order *i.e.* MSB.

4.3.2 Header Bytes

The two bytes following the Length byte are ASCII characters 'N' and 'A' (0x4e and 0x41 respectively). The two bytes are static and present in all packets. Wrong bytes will result in that NanoBoot discards the packet.

4.3.3 CT Byte

The Sensinode NAP protocol specifies a control (CT) byte to separate control and data messages as well as used protocol and addressing modes. This byte is 0xCD for NAP configuration message identifying NanoBoot protocol data. Packets with unknown CT byte will be discarded.

4.3.4 cmd_id byte

The cmd_id byte is a byte which defines the packet type. Packet types relevant to the NanoBoot are listed in Table 3.

cmd_id	Packet type
0x01	FLASH_WRITE_PAGE
0x81	FLASH_WRITE_PAGE_CONFIRM
0x02	FLASH_WRITE_PAGE_DONE
0x05	MAC_ADDRESS_READ
0x85	MAC_ADDRESS_READ_CONFIRM / MAC_ADDRESS_SET_CONFIRM
0x08	MAC_ADDRESS_SET
0x0A	APPLICATION_MODE_TOGGLE
0x8A	APPLICATION_MODE_TOGGLE_REPLY
0x09	UNSUPPORTED_MESSAGE
0x0B	VERSION_REQUEST
0x8B	VERSION_REPLY

Table 3. Command types

4.3.5 CS Byte

The checksum byte is calculated as Exclusive-OR (XOR) from all bytes of the packet (excluding the CS byte itself but including the length byte). The Sensinode NanoBoot protocol parser will discard packet if the checksum does not match.

4.4 API Commands

Table 4 describes the available commands and their respective payload structures. Bytes# describes variable fields of basic packet structure for each command.

Command	CC1180 DIR.	Byte #1	Byte #2	Byte #3	Byte #4	Byte #5	Byte #N
FLASH_WRITE_PAGE	IN	Page number	Encoding flag	Page setups	DATA byte 1	DATA byte 2	DATA byte 64
FLASH_WRITE_PAGE_CONFIRM	OUT	Page number	-	-	-	-	-
FLASH_WRITE_PAGE_DONE	OUT	Page number	-	-	-	-	-
MAC_ADDRESS_READ	IN	-	-	-	-	-	-
MAC_ADDRESS_READ_CONFIRM	OUT	MAC byte 1	MAC byte 2	MAC byte 3	MAC byte 4	MAC byte 5	MAC byte 8
MAC_ADDRESS_SET_CONFIRM	OUT	MAC byte 1	MAC byte 2	MAC byte 3	MAC byte 4	MAC byte 5	MAC byte 8
MAC_ADDRESS_SET	IN	MAC byte 1	MAC byte 2	MAC byte 3	MAC byte 4	MAC byte 5	MAC byte 8
APPLICATION_MODE_TOGGLE	IN	-	-	-	-	-	-
APPLICATION_MODE_TOGGLE_REPLY	OUT	-	-	-	-	-	-
VERSION_REQUEST	IN	-	-	-	-	-	-

Command	CC1180 DIR.	Byte #1	Byte #2	Byte #3	Byte #4	Byte #5	Byte #N
VERSION_REPLY	OUT	BL version byte	Application version byte 1	Application version byte 2	Application version byte 3	Application version byte 4	Application version byte 6
UNSUPPORTED_MESSAGE	OUT	Error type					

Table 4. Supported commands and their packet format

BL version byte – 0xf0 bits indicates integer part of version number, 0x0f bits indicates decimal part of version number, as integers. E.g. 0x10 shall be interpreted as version 1.0.

Application version byte – Version of the Sensinode NanoStack 2.0 Lite 6LoWPAN stack

Error type – 0x00 for NAP frame errors, any other value indicates a NanoBoot protocol error.

Encoding flag – is always 0x01.

4.5 State machine

This chapter describes the recommended method for implementing a state machine for a host application using NanoBoot protocol to communicate with a CC1180 network Processor. An example application that can be used to interact with the Sensinode NanoBoot bootloader to e.g. perform software update is described in CC-6LOWPAN-DK-868 User's Guide (SWRU298.pdf).

The figures below introduce the basic message flows that are supported in NanoBoot.

4.5.1 Example Message flows

Common for all figures below is that NanoBoot in **CC1180 must be** set in NanoBoot mode before any communication is initiated. NanoBoot mode can be entered by setting the MODE pin to ground once, or by sending *APPLICATION_MODE_TOGGLE* NAP protocol message from Host to Network Processor; assuming it has a valid application which supports mode toggle.

Figure 3 explains how MAC address is set to a **CC1180** Network Processor. Same communication flow also applies for message pairs *MAC_ADDRESS_READ/MAC_ADDRESS_READ_CONFIRM* and *VERSION_REQUEST/VERSION_REPLY*.

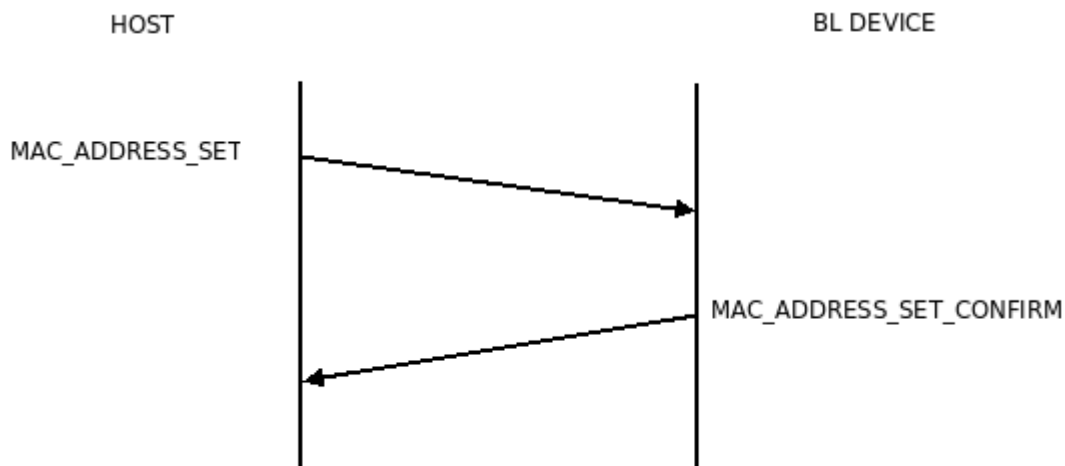


Figure 3. MAC address request

HOST represents PC or a host MCU device that implements the Host part of the communication protocol defined in this document. *BL Device* is the device running NanoBoot, i.e. **CC1180**.

Figure 4 describes a situation where *HOST* sends an unrecognized message to *BL Device*. If *BL Device* is in NanoBoot mode it responds with *UNSUPPORTED_MESSAGE* cmd_id. If *CS* byte match fails, 'N' / 'A' headers are missing or *CT* byte does not match, then no *UNSUPPORTED_MESSAGE* response is sent as received data is quietly discarded on *BL Device*.

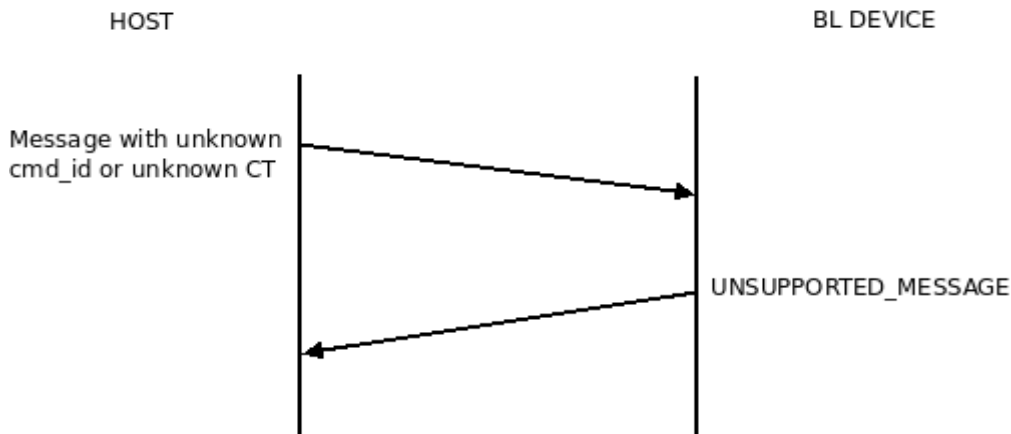


Figure 4. Unsupported data received by BL Device

To toggle between NanoBoot mode and application mode, message *APPLICATION_MODE_TOGGLE* can be used. This message type is one-way communication only as it switches *BL Device* mode immediately to application mode if NanoBoot is running when it is received. If the *HOST* sends the *APPLICATION_MODE_TOGGLE* message to *BL Device* while it is in application mode the *BL Device* will immediately toggle to NanoBoot mode.

4.6 Software update process

Software update can only be performed with a binary file provided by Sensinode Ltd. since Sensinode Ltd. encrypts the NanoStack 2.0 Lite 6LoWPAN stack. The *HOST* initializes communication by verifying that *BL Device* is in NanoBoot mode. This can be done by e.g. reading the MAC address of the **CC1180** device. If a valid reply is received, *BL Device* is in NanoBoot mode, since reading the MAC address is only possible if the device is in bootloader mode.

FLASH_WRITE_PAGE message consists of first page number, encoding flag, page setups and payload. Payload consists of 64 byte fragments of the complete binary file. The binary file has to be read so that first byte of *FLASH_WRITE_PAGE* payload is the 1024th byte of the binary file and the second byte of *FLASH_WRITE_PAGE* is the 1023rd byte of the binary file etc. Figure 5 demonstrates communication between *HOST* and *BL Device* during one flash page update.

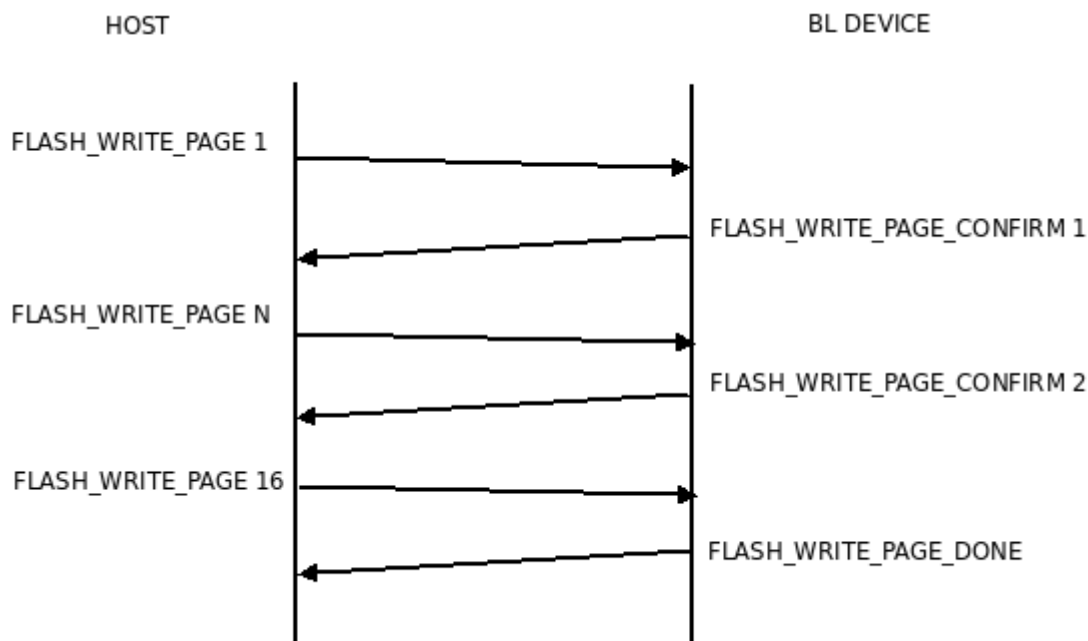


Figure 5. Software update process for one page

The single page flash update process is then repeated in order to send the complete binary file to *BL Device* in 64 byte blocks. If any errors occur during the process programming has to be restarted from beginning since binary is decrypted on *BL Device*. Possible error message is *UNSUPPORTED_MESSAGE*.

If programming is interrupted by the *BL Device* and it is not responding to *requests* it must be reset and NanoBoot mode initiated.

The NanoBoot cannot be overwritten as its bootloader flash memory area has write protection. Failure in the programming phase cannot cause errors to NanoBoot. The only way to remove the NanoBoot is to perform a complete chip erase via the debug interface. The debug interface is locked as well; the only allowed command is chip erase. *Note: Erasing the chip will result in having a blank CC110F32, with no possible way to recover the Sensinode NanoBoot.*

4.6.1 FLASH_WRITE_PAGE message details

When a fragment of the firmware is sent to *BL Device*, headers of *FLASH_WRITE_PAGE* message must contain page specific and slice specific information. *Page Number*, *Encoding* flag and *Page Setup* contains information to which address the binary data payload *should* go on device. Page Number is offset multiple(s) of 1024 bytes and Page Setup is an offset multiple(s) of 64 bytes.

One flash page in **CC1180** is 1024 bytes. Therefore minimum Page Number is 1 and maximum Page Number is 27, as application firmware (stack) must be placed in segment from 0x0400 to 0x6FFF. If the binary is transferred in 64 byte blocks, it makes 16 blocks of 64 byte each per page. Therefore minimum Page Setup is 0 and maximum is 15 for one flash page.

Page number byte states to which page payload is going to be flashed.

Byte	Bit #7	Bit #6	Bit #5	Bit #4	Bit #3	Bit #2	Bit #1	Bit #0
Page Number	MSB	--	--	--	--	--	--	LSB
Page Setup	MSB	--	--	--	--	--	--	LSB

Table 5. FLASH_WRITE_PAGE message configuration bytes

Encoding flag is **always** 0x01.

5 Debug Interface

The **CC1180** includes an on-chip debug interface, which communicates over a two-wire interface. The functionality of the debug interface in **CC1180** is limited to erasing the on-chip flash memory.

*Note: Erasing the chip will result in having a blank **CC1110F32**, with no possible way to recover the Sensinode NanoBoot. Do not connect the Debug Interface unless the intention is to remove the NanoBoot bootloader.*

The debug interface uses pins DEBUG_DATA and DEBUG_CLOCK. The only way to remove the NanoBoot bootloader is to perform a complete chip erase via the debug interface. For more information, see SWRS033.pdf.

6 Development Kit Ordering Information

Orderable Evaluation Module	Description	Minimum Order Quantity
CC-6LOWPAN-DK-868	Sub-GHz 6LoPWAN Development Kit, 868/915 MHz	1

Table 6. Development Kit Ordering Information

7 References

- [1] CC1110 Datasheet (SWRS033.pdf)
- [2] CC-6LOWPAN-DK-868 User's Guide (SWRU298.pdf)

8 General Information

8.1 Document History

Revision	Date	Description/Changes
SWRS113	29.08.2011	Initial Release
SWRS113A	09.09.2011	Editorial updates

Table 7: Document History

PACKAGING INFORMATION

Orderable Device	Status ⁽¹⁾	Package Type	Package Drawing	Pins	Package Qty	Eco Plan ⁽²⁾	Lead/ Ball Finish	MSL Peak Temp ⁽³⁾	Samples (Requires Login)
CC1180RSPR	ACTIVE	VQFN	RSP	36	2500	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-3-260C-168 HR	
CC1180RSPT	ACTIVE	VQFN	RSP	36	250	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-3-260C-168 HR	

⁽¹⁾ The marketing status values are defined as follows:

ACTIVE: Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

OBSOLETE: TI has discontinued the production of the device.

⁽²⁾ Eco Plan - The planned eco-friendly classification: Pb-Free (RoHS), Pb-Free (RoHS Exempt), or Green (RoHS & no Sb/Br) - please check <http://www.ti.com/productcontent> for the latest availability information and additional product content details.

TBD: The Pb-Free/Green conversion plan has not been defined.

Pb-Free (RoHS): TI's terms "Lead-Free" or "Pb-Free" mean semiconductor products that are compatible with the current RoHS requirements for all 6 substances, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, TI Pb-Free products are suitable for use in specified lead-free processes.

Pb-Free (RoHS Exempt): This component has a RoHS exemption for either 1) lead-based flip-chip solder bumps used between the die and package, or 2) lead-based die adhesive used between the die and leadframe. The component is otherwise considered Pb-Free (RoHS compatible) as defined above.

Green (RoHS & no Sb/Br): TI defines "Green" to mean Pb-Free (RoHS compatible), and free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material)


⁽³⁾ MSL, Peak Temp. -- The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

TAPE AND REEL INFORMATION

REEL DIMENSIONS

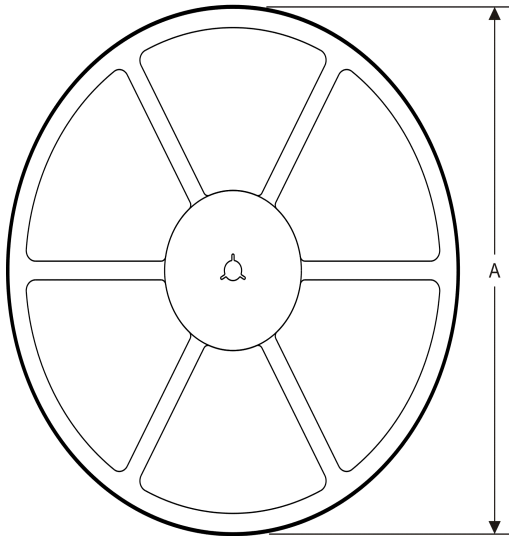

TAPE DIMENSIONS



A0	Dimension designed to accommodate the component width
B0	Dimension designed to accommodate the component length
K0	Dimension designed to accommodate the component thickness
W	Overall width of the carrier tape
P1	Pitch between successive cavity centers

TAPE AND REEL INFORMATION

*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
CC1180RSPR	VQFN	RSP	36	2500	330.0	16.4	6.3	6.3	1.5	12.0	16.0	Q2
CC1180RSPT	VQFN	RSP	36	250	330.0	16.4	6.3	6.3	1.5	12.0	16.0	Q2

TAPE AND REEL BOX DIMENSIONS


*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
CC1180RSPR	VQFN	RSP	36	2500	333.2	345.9	28.6
CC1180RSPT	VQFN	RSP	36	250	333.2	345.9	28.6

重要声明

德州仪器(TI) 及其下属子公司有权在不事先通知的情况下, 随时对所提供的产品和服务进行更正、修改、增强、改进或其它更改, 并有权随时中止提供任何产品和服务。客户在下订单前应获取最新的相关信息, 并验证这些信息是否完整且是最新的。所有产品的销售都遵循在订单确认时所提供的TI 销售条款与条件。

TI 保证其所销售的硬件产品的性能符合TI 标准保修的适用规范。仅在TI 保证的范围内, 且TI 认为有必要时才会使用测试或其它质量控制技术。除非政府做出了硬性规定, 否则没有必要对每种产品的所有参数进行测试。

TI 对应用帮助或客户产品设计不承担任何义务。客户应对其使用TI 组件的产品和应用自行负责。为尽量减小与客户产品和应用相关的风险, 客户应提供充分的设计与操作安全措施。

TI 不对任何TI 专利权、版权、屏蔽作品权或其它与使用了TI 产品或服务的组合设备、机器、流程相关的TI 知识产权中授予的直接或隐含权限作出任何保证或解释。TI 所发布的与第三方产品或服务有关的信息, 不能构成从TI 获得使用这些产品或服务的许可、授权、或认可。使用此类信息可能需要获得第三方的专利权或其它知识产权方面的许可, 或是TI 的专利权或其它知识产权方面的许可。

对于TI 的产品手册或数据表, 仅在没有对内容进行任何篡改且带有相关授权、条件、限制和声明的情况下才允许进行复制。在复制信息的过程中对内容的篡改属于非法的、欺诈性商业行为。TI 对此类篡改过的文件不承担任何责任。

在转售TI 产品或服务时, 如果存在对产品或服务参数的虚假陈述, 则会失去相关TI 产品或服务的明示或暗示授权, 且这是非法的、欺诈性商业行为。TI 对此类虚假陈述不承担任何责任。

TI 产品未获得用于关键的安全应用中的授权, 例如生命支持应用(在该类应用中一旦TI 产品故障将预计造成重大的人员伤亡), 除非各方官员已经达成了专门管控此类使用的协议。购买者的购买行为即表示, 他们具备有关其应用安全以及规章衍生所需的所有专业技术和知识, 并且认可和同意, 尽管任何应用相关信息或支持仍可能由TI 提供, 但他们将独力负责满足在关键安全应用中使用其产品及TI 产品所需的所有法律、法规和安全相关要求。此外, 购买者必须全额赔偿因在此类关键安全应用中使用TI 产品而对TI 及其代表造成的损失。

TI 产品并非设计或专门用于军事/航空应用, 以及环境方面的产品, 除非TI 特别注明该产品属于“军用”或“增强型塑料”产品。只有TI 指定的军用产品才满足军用规格。购买者认可并同意, 对TI 未指定军用的产品进行军事方面的应用, 风险由购买者单独承担, 并且独力负责在此类相关使用中满足所有法律和法规要求。

TI 产品并非设计或专门用于汽车应用以及环境方面的产品, 除非TI 特别注明该产品符合ISO/TS 16949 要求。购买者认可并同意, 如果他们在汽车应用中使用任何未被指定的产品, TI 对未能满足应用所需要求不承担任何责任。

可访问以下URL 地址以获取有关其它TI 产品和应用解决方案的信息:

	产品		应用
数字音频	www.ti.com.cn/audio	通信与电信	www.ti.com.cn/telecom
放大器和线性器件	www.ti.com.cn/amplifiers	计算机及周边	www.ti.com.cn/computer
数据转换器	www.ti.com.cn/dataconverters	消费电子	www.ti.com/consumer-apps
DLP® 产品	www.dlp.com	能源	www.ti.com/energy
DSP - 数字信号处理器	www.ti.com.cn/dsp	工业应用	www.ti.com.cn/industrial
时钟和计时器	www.ti.com.cn/clockandtimers	医疗电子	www.ti.com.cn/medical
接口	www.ti.com.cn/interface	安防应用	www.ti.com.cn/security
逻辑	www.ti.com.cn/logic	汽车电子	www.ti.com.cn/automotive
电源管理	www.ti.com.cn/power	视频和影像	www.ti.com.cn/video
微控制器 (MCU)	www.ti.com.cn/microcontrollers		
RFID 系统	www.ti.com.cn/rfidsys		
OMAP 机动性处理器	www.ti.com/omap		
无线连通性	www.ti.com.cn/wirelessconnectivity		
	德州仪器在线技术支持社区		www.deyisupport.com

邮寄地址: 上海市浦东新区世纪大道 1568 号, 中建大厦 32 楼 邮政编码: 200122
Copyright © 2011 德州仪器 半导体技术 (上海) 有限公司

www.BDTIC.com/TI